


# DREAM 15 CHANNEL WALL SWITCH 191685

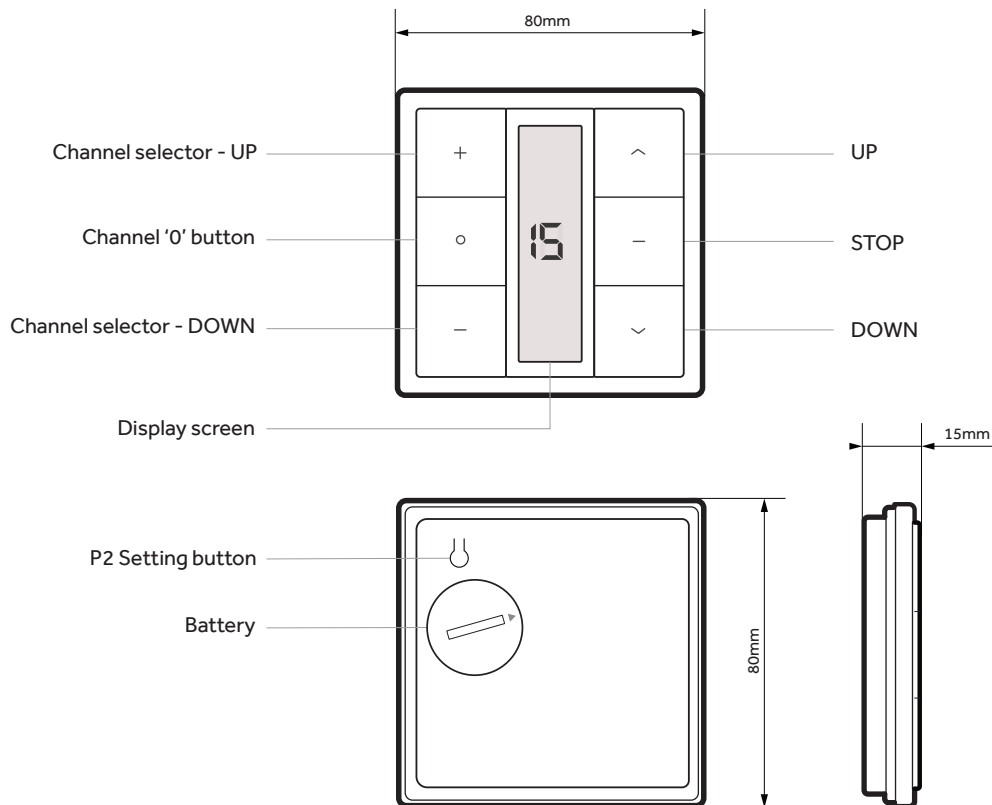

## TECHNICAL SPECIFICATION

INPUT VOLTAGE	3V	OUTSIDE TRANSMISSION RANGE	200m
BATTERY	CR2450	INSIDE TRANSMISSION RANGE	35m
TRANSMITTING FREQUENCY	433.925MHz	BATTERY LIFE	Up to 2 years
TRANSMITTING POWER	10MW	OPERATING TEMPERATURE	-5C ~ 50C

## FUNCTIONAL FEATURES

- Bi-directional functionality
- Uni-directional functionality
- 15 channels
- Battery replacing tool
- Button lock/unlock option
- Hide/Unhide channel option
- Standard CR2450 cell battery


# PAIRING A WALL SWITCH AND INITIAL SETTINGS

Before starting the process of pairing a wall switch to a Dream motor, choose the channel to which it is to be paired. Channel Zero is reserved for simultaneously controlling all blinds paired to a wall switch and cannot be used for pairing, programming or other adjustments.

If using a battery powered motor, ensure that it is sufficiently charged to complete the set-up process.

Charging a motor from empty will take approximately 6 hours.


## PAIRING A WALL SWITCH WITH A MOTOR

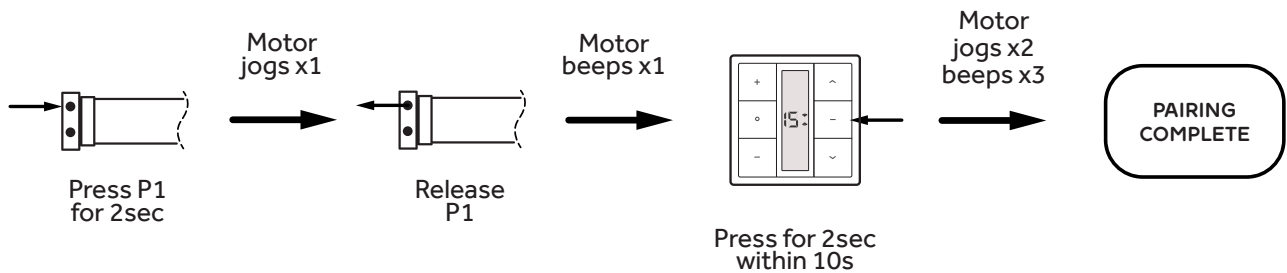


### Note:

After pairing a wall switch and before setting limits, the motor will be defaulted to jog-mode. To switch to continuous-mode, see **ADVANCED FUNCTIONALITY - SWITCHING BETWEEN JOG MODE AND CONTINUOUS MODE.**


## SWITCHING DIRECTION

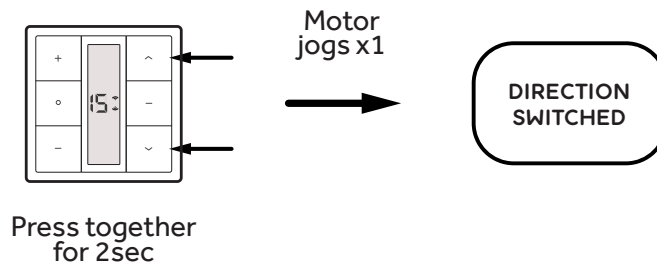

## SETTING THE TOP LIMIT

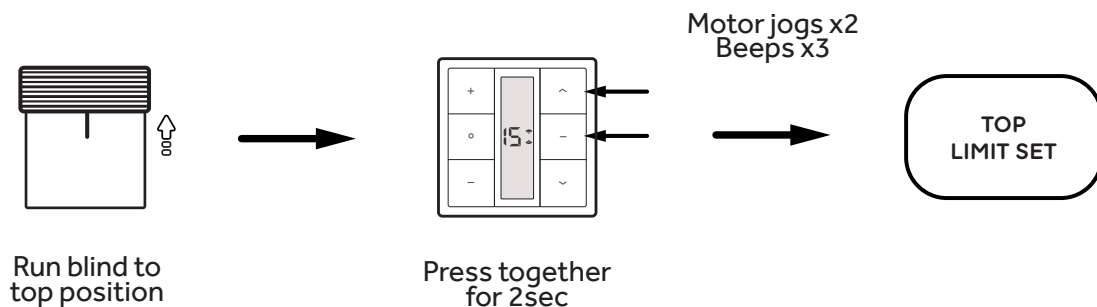


## SETTING THE BOTTOM LIMIT

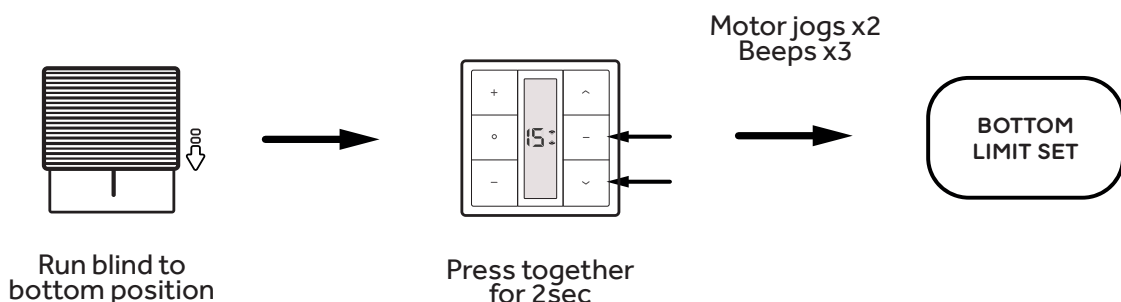

# ADVANCED SETTINGS


## SWITCHING FROM CONTINUOUS MODE TO JOG MODE

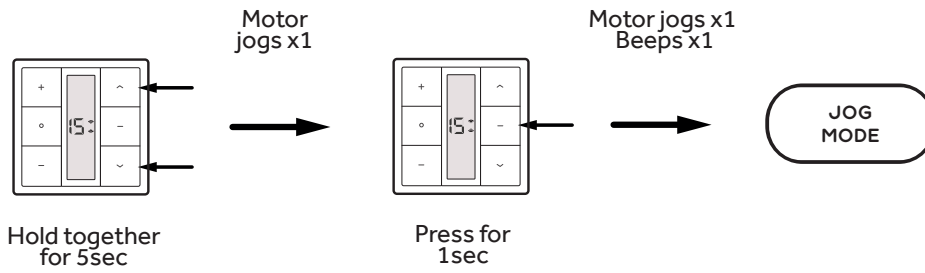


### Note:

When in jog mode, holding the up or down buttons will provide continuous-moving temporarily.


## SWITCHING FROM JOG MODE TO CONTINUOUS MODE

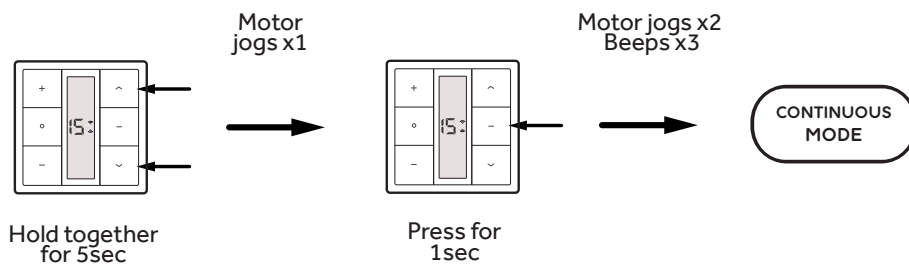

## INCREASING MOTOR SPEED BATTERY MOTORS ONLY

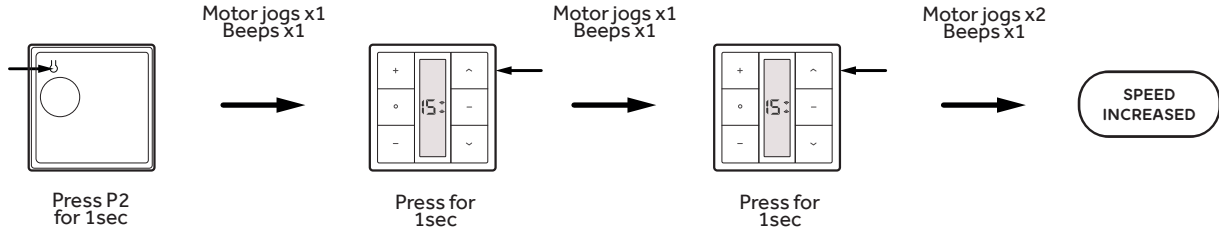


## DECREASING MOTOR SPEED BATTERY MOTORS ONLY

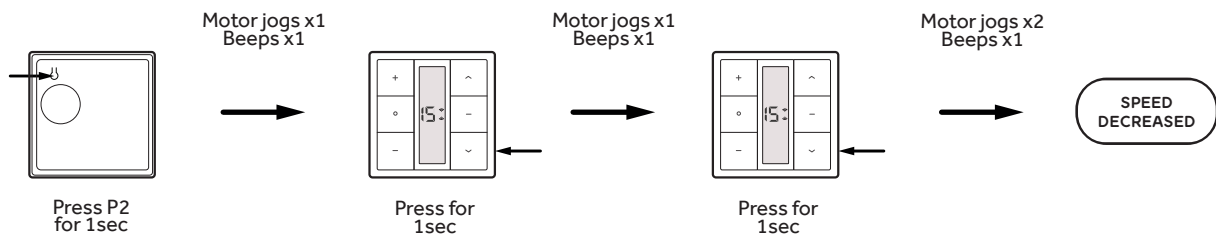

### Note:


If the motor does not respond to INCREASING/DECREASING instructions, it has already reached its upper/lower speed setting.

## SETTING A FAVOURITE STOP POSITION

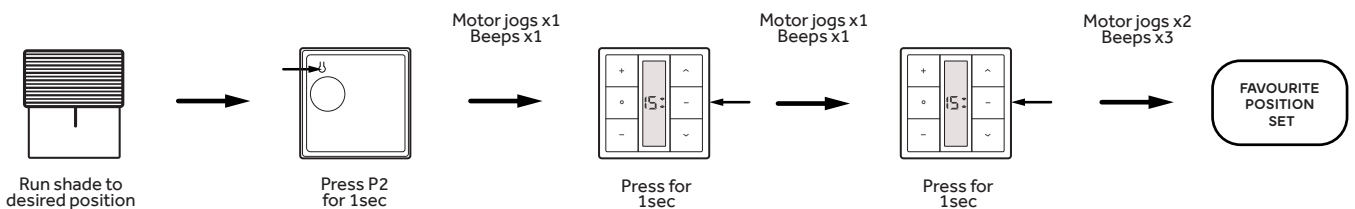


# ADVANCED SETTINGS CONTINUED


## CLEARING A FAVOURITE STOP POSITION

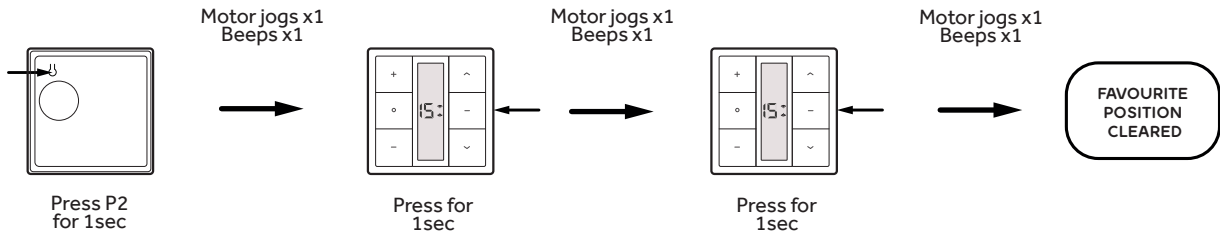

## FINE-TUNING A TOP LIMIT

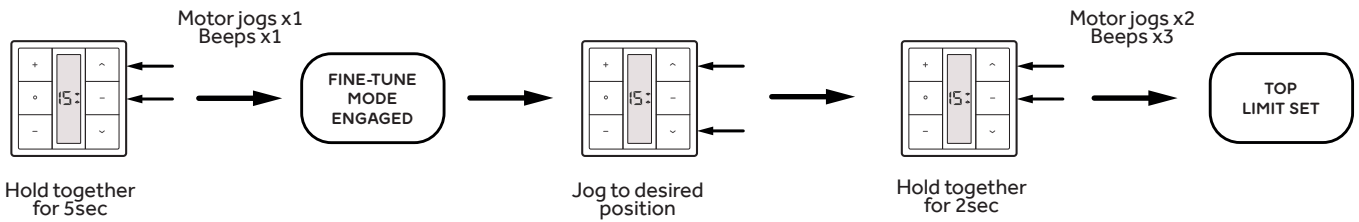

## FINE-TUNING A BOTTOM LIMIT

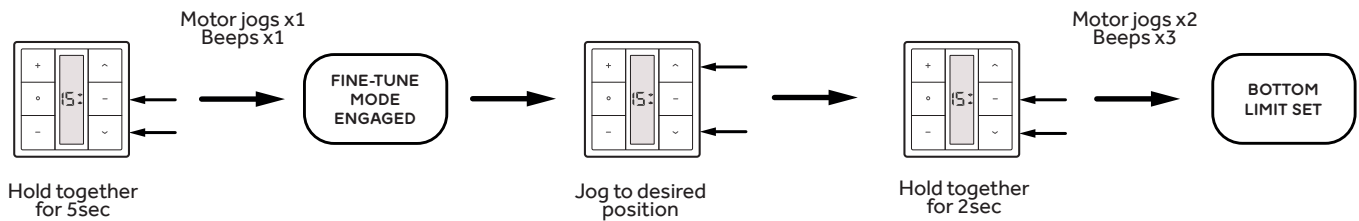


# ADDITIONAL FUNCTIONS

## HIDE / UNHIDE CHANNEL FUNCTION


Allows the user to hide or unhide unused or used channels. By selecting a channel, i.e. channel 5, channels 1,2,3,4 and 5 will remain active while the other 10 unused channels will become hidden.

⚠ Factory default: 15 channels unhidden

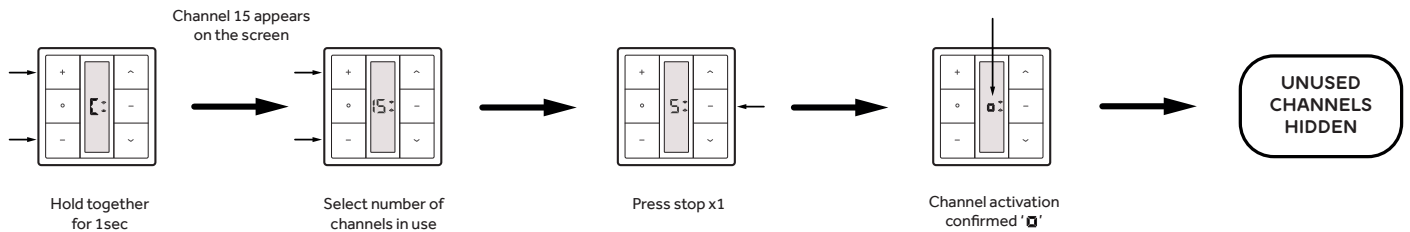

## UNI-DIRECTION / BI-DIRECTION SWITCHING MODE


⚠ Factory default: Bi-directional mode

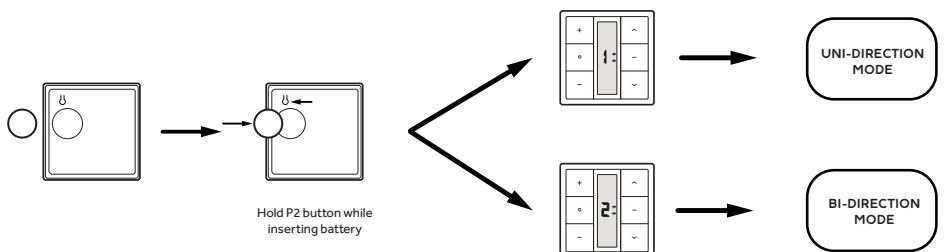


# ADDITIONAL FUNCTIONS CONTINUED

## MOTOR SETTING LOCK / UNLOCK MODE

Enables or disables entering the motor setting mode without affecting normal remote blind operation.

 Factory default:  
Device unlocked

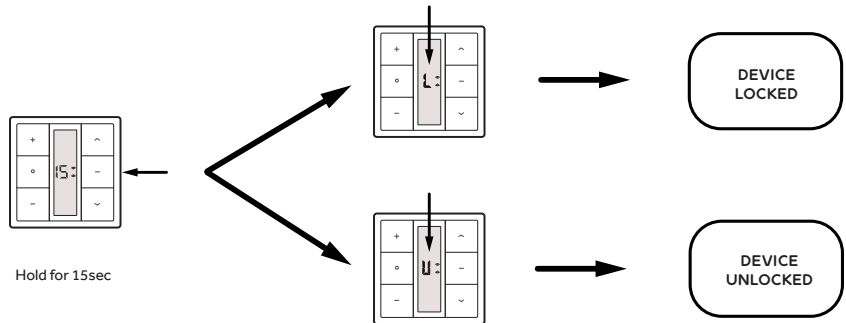

## CONFORMITY DECLARATION

Decorquip Ltd. hereby declare that the Dream Range products are in conformity with the essential requirements of the applicable European Directives and, in particular, the Electromagnetic Compatibility Directive **2014/30/EU**, Machinery Directive **2006/42/EC** and Radio Directive **2014/53/EU**.

## DISPOSAL INSTRUCTIONS

Damaged/unused electrical products and batteries are not to be disposed with regular household waste. Dispose of these motors in compliance with authorities waste regulations. Alternatively, return your motors to Decorquip Ltd.

**Decorquip Ltd**  
Rhymney House, Unit 8, Bedwas House Industrial Estate, Bedwas, Caerphilly, CF83 8DW.  
T: 029 2088 0811