

# Roller Blind

## Fitting, operation and maintenance instructions

**Warning!** The operating instructions must be read before operating the blind.

### Fitting Instructions for chain control and motorised Roller Blinds

This procedure can be completed by non-professionals.

#### Step 1 - Identify and position the brackets


Ensure that each bracket is correctly matched and positioned to correspond with the Idle End and Control End of the blind.

Use the same measuring reference points taken when determining the blind's width - you may also use the blind itself as a fitting template.


When installing inside the recess, ensure the brackets are set far enough away from any window handles or obstructions to allow the blind to move freely. Finally, allow just enough clearance for the blind to fit neatly and securely between the brackets.

#### Step 2 - Mark, drill, and secure the brackets


If necessary, mark the screw positions by pencil through the bracket slots. Drill and plug the holes as required, then fix the brackets securely using appropriate fittings. (Please note that screws and fixings are not supplied).

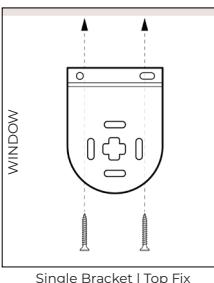


Single Bracket | Top Fix

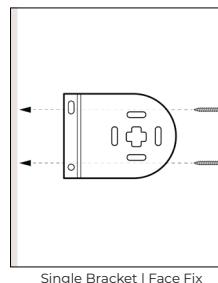

Single Bracket | Face Fix

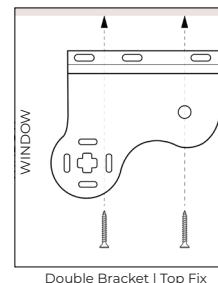

Double Bracket | Top Fix

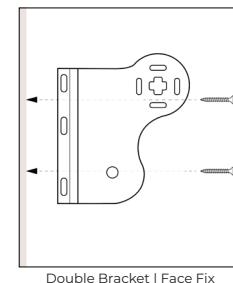



Double Bracket | Face Fix

#### Step 3 - Fit the bracket covers

Once the brackets are secured, attach the bracket covers to fully conceal the fittings. The covers should be used for both, inside or outside the recess installations.

#### Step 4 - Install the blind into the brackets

Remove the blind from packaging. Insert the pin end into the round hole of the Idle End bracket, then hook the Control End into the slotted bracket and push down until it clips firmly and securely into place.

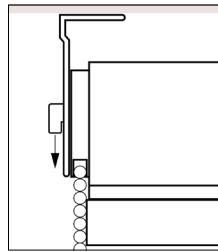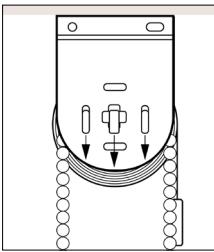

#### Step 5 - Secure the chain

Remove the retaining fabric strip holding the blind. If the blind is operated by a chain (not applicable for motorised blinds), fit the chain safety device as instructed on the next page to ensure safe and compliant operation.

### Fitting Instructions for Roller Blinds with Back Bar



This procedure can be completed by non-professionals.

#### Step 1 - Install the brackets

The blind is supplied pre-fitted to the back bar. Position the supplied top-fix brackets at least 50 mm from each end of the blind and spaced no more than 500 mm apart, using appropriate fixings for your surface. Ensure the lip of each bracket is facing toward the window.

#### Step 2 - Secure the back bar

Fit the back bar into the installed brackets, making sure the back edge of the back bar fully clips and locks into place within each bracket.

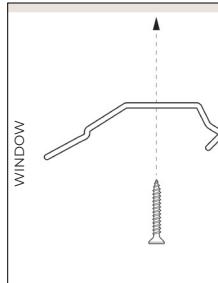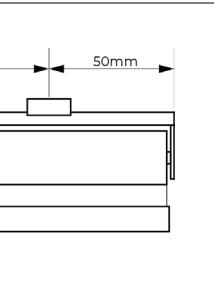

#### Step 3 - Secure the chain


Remove the retaining fabric strip holding the blind. If the blind is operated by a chain (not applicable for motorised blinds), fit the chain safety device as instructed on the next page to ensure safe and compliant operation.

## Fitting the safety device: 'P' Clip 400990

This procedure can be completed by non-professionals.


### Step 1 - Attach the 'P' Clip to the Chain

Once the blind is securely fitted, attach the 'P' Clip to the control chain.

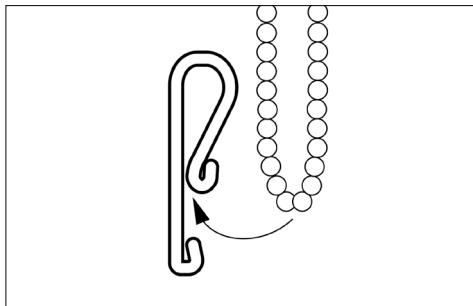


### Step 2 - Mark fixing points

Pull the chain taut with the device, placing it as far from the control mechanism as possible. This keeps the chain tight, preventing slack and enhancing child safety. Once positioned, mark through the screw holes to indicate where the device will be fixed.

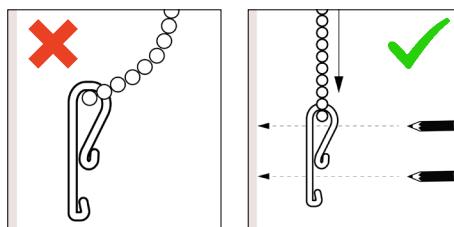


### Step 3 - Secure the Device

Move the device to one side and, using the marks made in Step 2, drill and plug the holes. Then reposition the device and fix it into place, ensuring it is securely mounted.

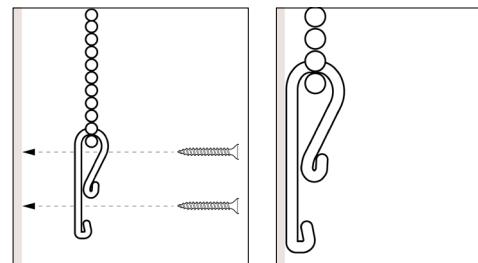

**Note:** If your blind has been supplied with a different safety device, please refer to the specific installation instructions available on our website for that device - [www.decorquip.com](http://www.decorquip.com)

### ⚠️ WARNING ⚠️

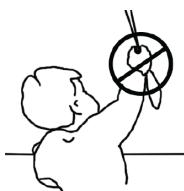

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

Always fit the chain and rear cord safety devices.

## Operation & Maintenance

**Warning!** The operating instructions must be read before operating the blind.

### Operating instructions - Standard roll (Fabric unrolls from behind blind)

1. To lower the fabric on the roller blind gently pull the operating chain closest to the window.
2. To raise the fabric on the blind gently pull the operating chain furthest from the window.

### Operating instructions - Reversed roll (Fabric unrolls from front of blind)

1. To lower the fabric on the roller blind gently pull the operating chain furthest from the window.
2. To raise the fabric on the blind gently pull the operating chain closest to the window.

### Operating instructions - Motorised rollers

Please check the Motorisation Instructions supplied with this blind prior to operating.

### Maintenance Instructions

This product is designed to be maintenance-free; however, we recommend carrying out regular visual inspections to ensure that no components are damaged, as this could lead to operating difficulties or pose a safety risk. If any maintenance is required, it should be completed promptly by a reputable blind company.

For light cleaning, gently wipe or dust the fabric with a soft brush or duster.

For safety and performance, do not make alterations to the blind, chain, or safety device.