

Slow-up Spring Roller Blind

Fitting, operation and maintenance instructions

Warning! The operating instructions must be read before operating the blind.

Fitting Instructions for Roller Blind with slow-up spring

This procedure can be completed by non-professionals.

Step 1 - Identify and position the brackets


Ensure that each bracket is correctly matched and positioned to correspond with the idle end and spring end of the blind.

Use the same measuring reference points taken when determining the blind's width - you may also use the blind itself as a fitting template.

When installing inside the recess, ensure the brackets are set far enough away from any window handles or obstructions to allow the blind to move freely. Finally, allow just enough clearance for the blind to fit neatly and securely between the brackets.

Step 2 - Mark, drill, and secure the brackets

If necessary, mark the screw positions by pencil through the bracket slots. Drill and plug the holes as required, then fix the brackets securely using appropriate fixings. (Please note that screws and fixings are not supplied).

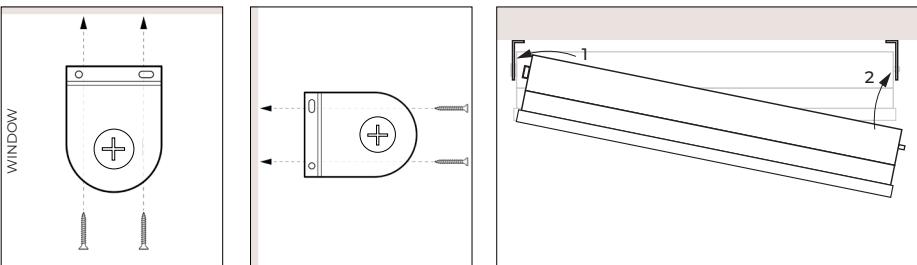

Step 4 - Install the blind


Insert the spring end into the spring end bracket, then slot the idle end into the idle end bracket and until it clips firmly and securely into place.

Fitting Instructions for Roller Blind with slow-up spring | Back bar

This procedure can be completed by non-professionals.

Step 1 - Install the brackets

The blind is supplied pre-fitted to the back bar. Position the supplied top-fix brackets at least 50 mm from each end of the blind and spaced no more than 500 mm apart, using appropriate fixings for your surface. Ensure the lip of each bracket is facing toward the window.

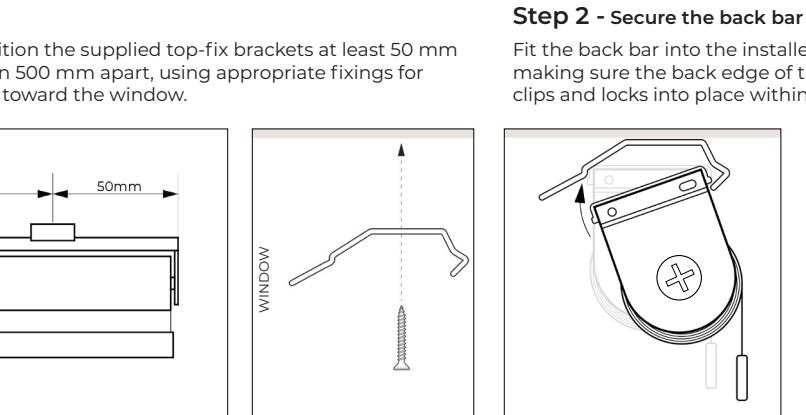

Step 2 - Secure the back bar

Fit the back bar into the installed brackets, making sure the back edge of the back bar fully clips and locks into place within each bracket.

Increasing the spring tension

This procedure can be completed by non-professionals.

Step 1 - Access the spring end bracket


Remove the blind from top clip brackets to gain access to the tensioning button located on the spring end bracket. *If your blind is face-fixed, you can ignore this step.*

Step 2 - Increase the spring tension

Using a screwdriver, turn the tensioning button clockwise until the desired spring tension is achieved.

Step 3 - Reinstall the blind

Reinstall the blind, ensuring the back edge of the back bar fully clips and locks into place within each bracket.

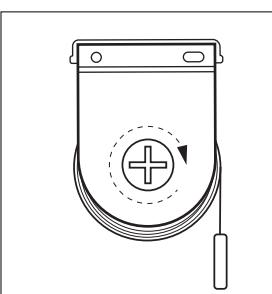

Decreasing the spring tension

This procedure can be completed by non-professionals.


Step 1 - Remove the blind

Remove the blind from top clip brackets. If your blind is face-fixed, you can ignore this step.




Step 2 - Remove the blind from back bar

Press the idle end pin and carefully remove the blind from the back bar.

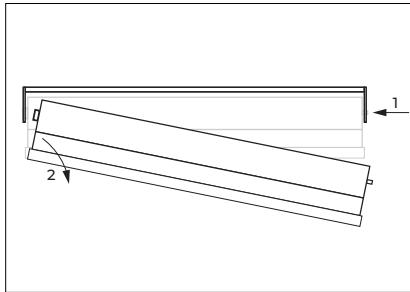


Step 3 - Release the spring tension

Using pliers, give a short clockwise twist to the square pin on the spring mechanism end. This will release the spring tension.

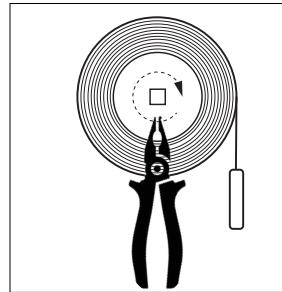


Step 4 - Reinstall the roller into back bar

Slot the roller spring end into the spring end back bar bracket, then insert the idle end into the idle end back bar bracket.

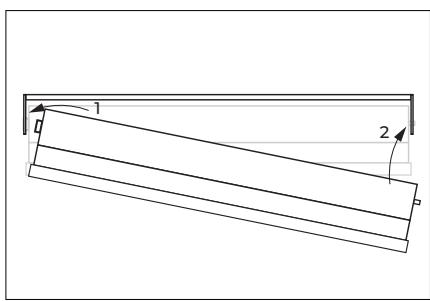

Step 5 - Tension the spring

Using a screwdriver, turn the tensioning button clockwise until the desired spring tension is achieved.

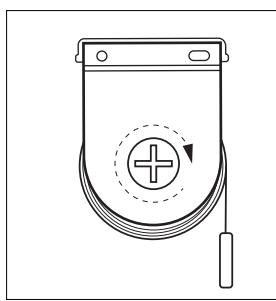

Step 6 - Reinstall the blind

Reinstall the blind, ensuring the back edge of the back bar fully clips and locks into place within each bracket.



Operation & Maintenance

Warning! The operating instructions must be read before operating the blind.

Operating instructions

1. To Lower the blind, gently pull down on the bottom bar, toggle, or handle to the desired position. The blind will stay securely in place once released.
2. To Raise the blind, pull down slightly on the bottom bar, toggle, or handle to release the spring mechanism, then guide the blind smoothly upwards to the desired position.

Maintenance Instructions

This product is designed to be maintenance-free; however, we recommend carrying out regular visual inspections to ensure that no components are damaged, as this could lead to operating difficulties or pose a safety risk. If any maintenance is required, it should be completed promptly by a reputable blind company.

For light cleaning, gently wipe or dust the fabric with a soft brush or duster.

For safety and performance, do not make alterations to the blind, chain, or safety device.