



DREAM

USER GUIDE

Motorised Curtain Tracks


MOTORS & CONTROLS

1. CURTAIN MOTORS

CURTAIN MOTORS FUNCTIONAL FEATURES

Bi-directional Functionality	Built-in Lithium-ion Battery (battery motor)	Favourite Stop Position
Electronic Limit Setting	Mains / Solar Charging (battery motor)	Internally Stored Settings
Manual Control Override	Switch Direction	Three Speeds Setting (battery motors)
Program / Operation Button P1	Built-in Radio Receiver	Pair with up to 10 Control Devices
Smart Home Compatible with DreamHub	USB-C Charging	Connector App

CURTAIN BATTERY MOTOR 191782

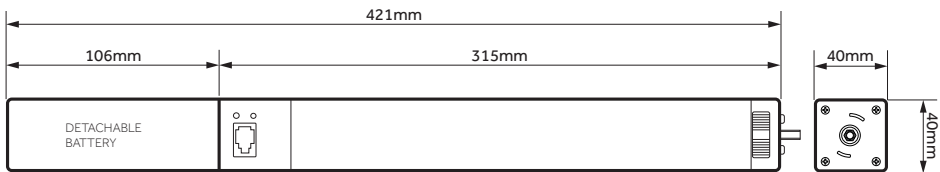


USB-C

CHARGING:
3m USB-C Cable and Adaptor | 191762

- CHARGE LEVEL INDICATION:
- Indicator light off or constant green – battery fully charged
 - Indicator light flashing red – battery requires charging
 - Indicator light flashing green – battery is charging

CURTAIN MAINS MOTOR 191780

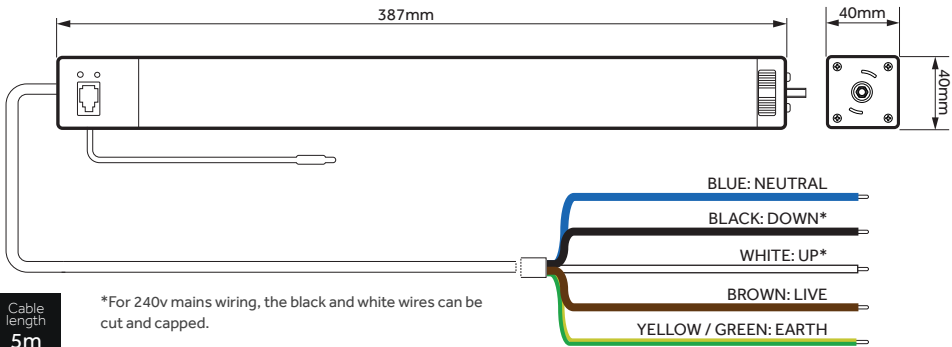

MOTOR TECHNICAL SPECIFICATIONS

Visit our website for the technical specifications of our motors
decorquip.com/product-category/motorisation

2. CONTROLS

DREAM 15 CHANNEL REMOTE 191679

The remote is compatible with all bi-directional Dream motors and older uni-directional motors. For programming and pairing options, refer to **page 16**. For additional functionality, refer to **page 27**.

DREAM REMOTE
FUNCTIONAL FEATURES

Bi-directional & Uni-directional Functionality

15 Channels

Pair up to 20 motors per channel

Channel '0' to operate all paired blinds simultaneously

Button Lock / Unlock option

Hide / Unhide Channel option

Standard CR2450 Cell Battery

Quick Release Magnetic Wall Bracket

Technical drawing of the Dream 15 Channel Remote 191679. The front view shows a rectangular device with a digital display showing '15', a signal strength indicator, and several control buttons (up, down, left, right, and a central button). The side view shows a slim profile with a width of 11mm. The back view shows a circular battery compartment with four screws. The overall height is 130mm and the width is 44mm.

DREAM 15 CHANNEL WALL SWITCH 191685

The wall switch is compatible with all bi-directional Dream motors and older uni-directional motors. The programming and pairing process is exactly the same as for the remote. For programming and pairing options, go to **page 16**. For additional features, refer to **page 28**.

DREAM WALL SWITCH
FUNCTIONAL FEATURES

Bi-directional & Uni-directional Functionality

15 Channels

Pair up to 20 motors per channel

Channel '0' to operate all paired blinds simultaneously

Button Lock / Unlock option

Hide / Unhide Channel option


Standard CR2450 Cell Battery

Wall Bracket

Technical drawing of the Dream 15 Channel Wall Switch 191685. The front view shows a rectangular device with a digital display showing '15', a signal strength indicator, and several control buttons (plus, minus, up, down, and a central button). The back view shows a circular battery compartment with four screws. The overall height is 80mm and the width is 80mm.


DREAMHUB PRO 191726

The DreamHub Pro works with all Dream motors by connecting them to your Wi-Fi network, enabling you to operate your blinds via smartphone using the free Connector app or voice control devices. For Connector app download instructions, please refer to **page 29**.

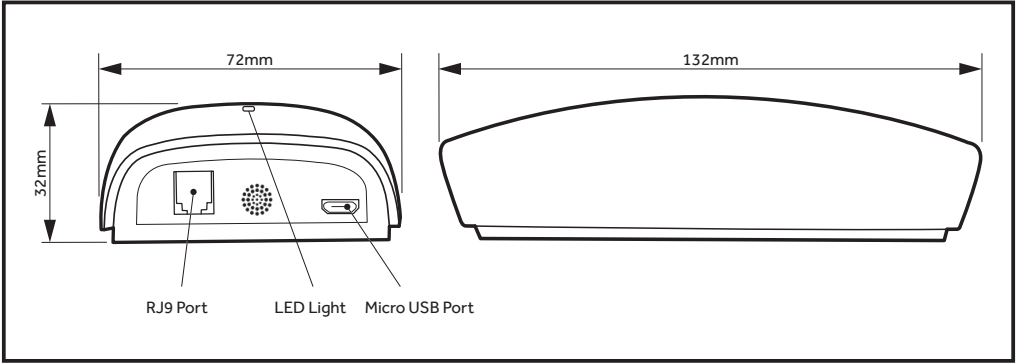


DREAMHUB MINI 191717

The DreamHub Mini is a smaller version of its Pro equivalent and, likewise, works with all Dream motors. Connect it to your Wi-Fi network to operate your blinds via smartphone using the free Connector app or voice control devices. For Connector app download instructions, refer to **page 29**.

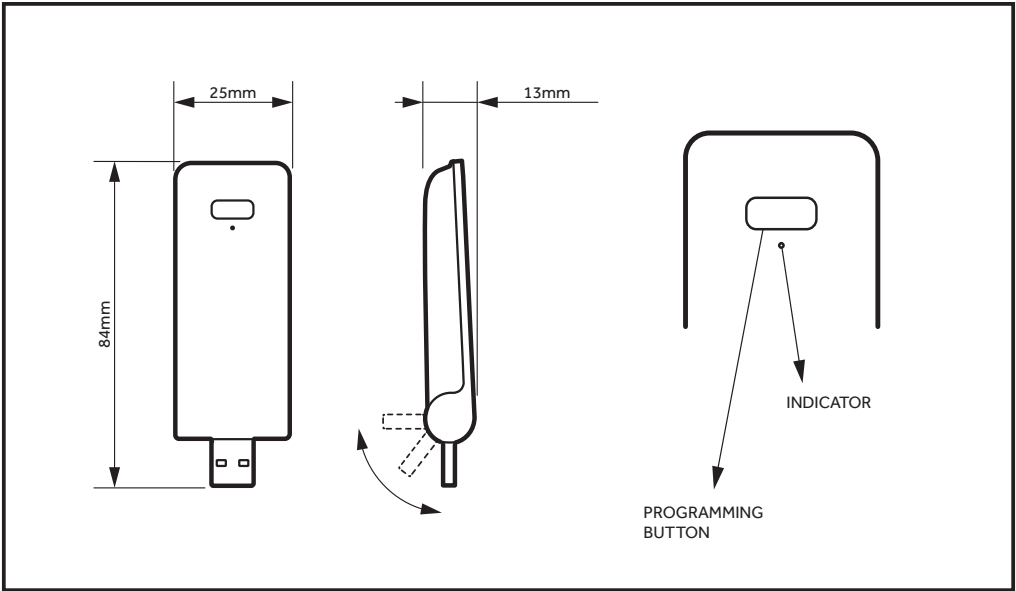


DREAM SIGNAL BOOSTER 191716

The Dream Signal Booster works with all Dream motors and control devices. When positioned between a control device and blinds, it extends the signal range up to 200m. For setup instructions, refer to **page 29**.

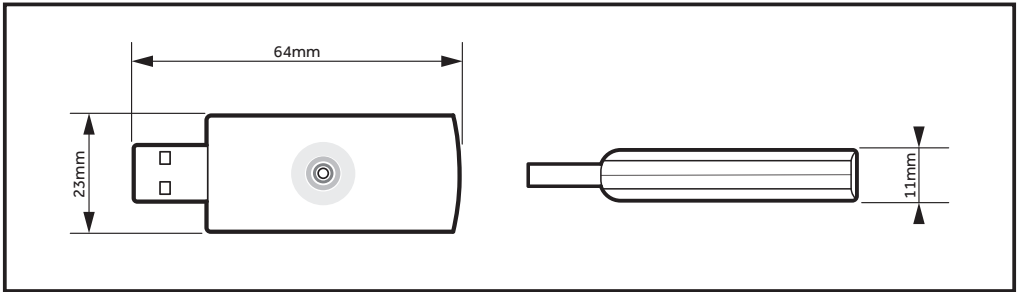

DREAM SUN SENSOR 191727

The Sun Sensor is compatible with all Dream Motors and operates on a simple premise: automatically closing blinds when the sun is too bright and opening them as soon as the situation changes. For programming and pairing instructions, please refer to **page 30**.

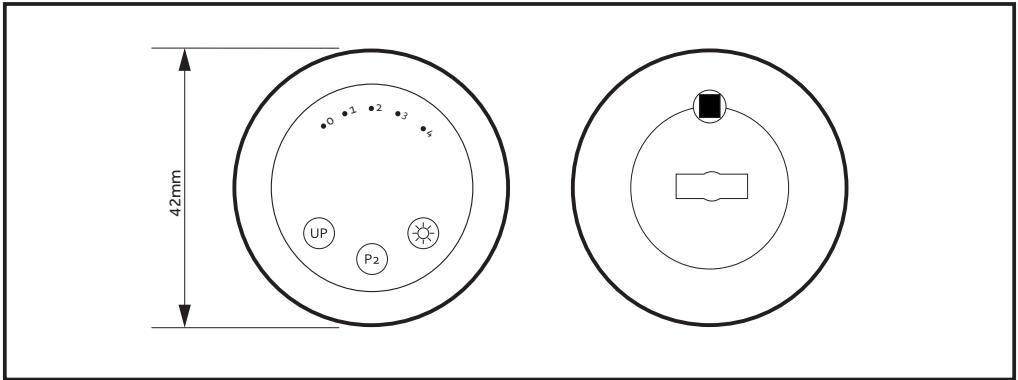

CONTROL DEVICES TECHNICAL SPECIFICATIONS




Visit our website for the technical specifications of our motors and control devices
decorquip.com/product-category/motorisation

PROGRAMMING INSTRUCTIONS



CURTAIN MOTORS / 15 CHANNEL REMOTE & WALL SWITCH

Both battery and mains Dream curtain motors are equipped with bi-directional technology, which not only provides them with smart functionality when coupled with smart devices but also makes the setup and operation with our 15 Channel Remote and 15 Channel Wall Switch a quick and easy process.

BUTTON SPECIFICATION

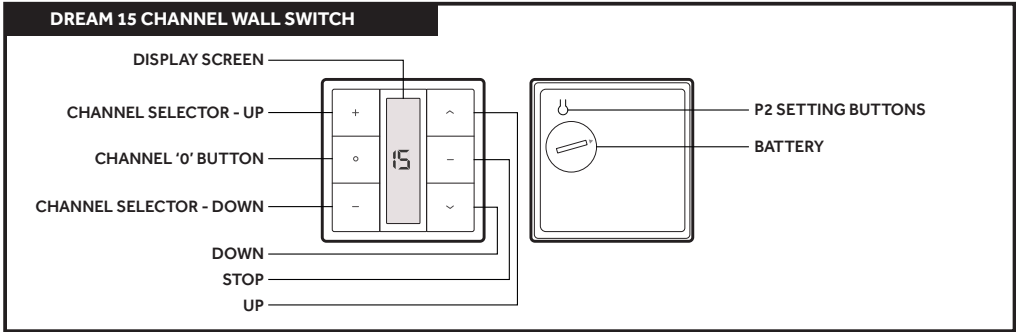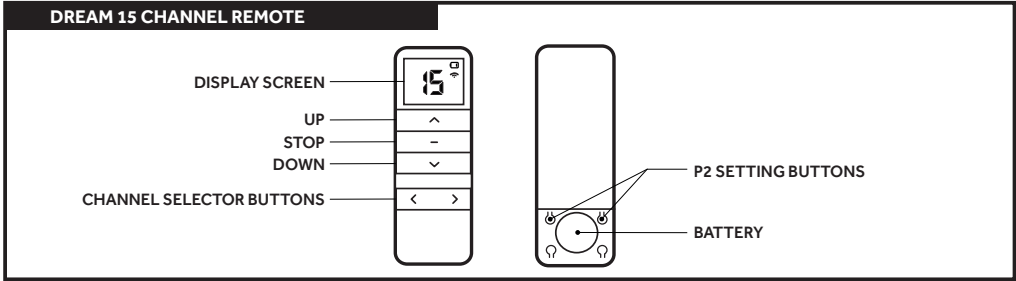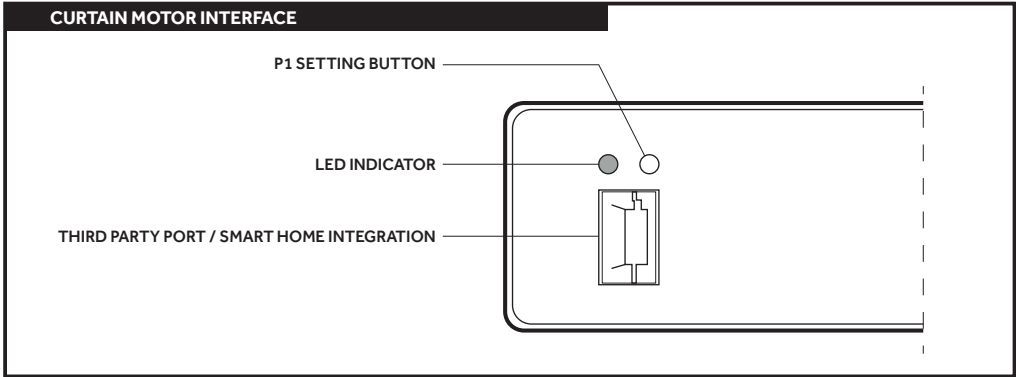


P1 BUTTON SETTINGS

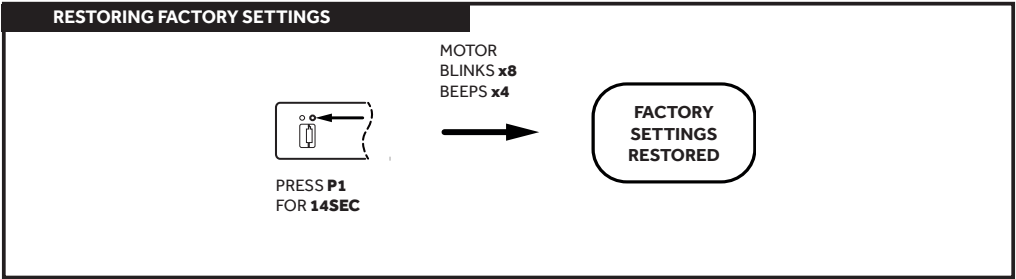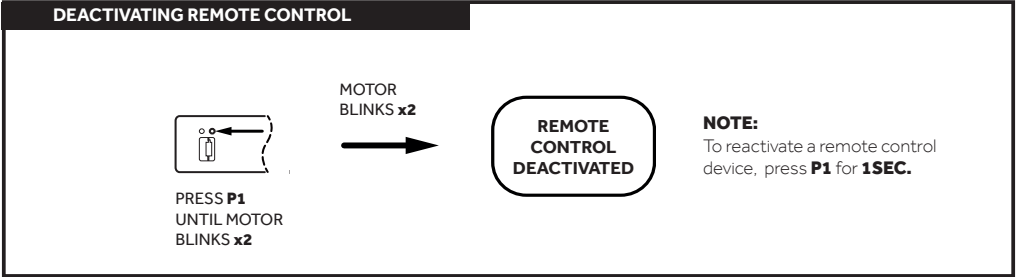


PAIRING A REMOTE/WALL SWITCH AND INITIAL SETTINGS

Before starting the process of pairing a handheld remote / wall switch to a Dream motor, choose the channel to which it is to be paired. Channel 0 is reserved for simultaneously controlling all blinds paired to a remote and cannot be used for pairing, programming, or other adjustments. If using a battery-powered motor, ensure that it is sufficiently charged to complete the setup process.

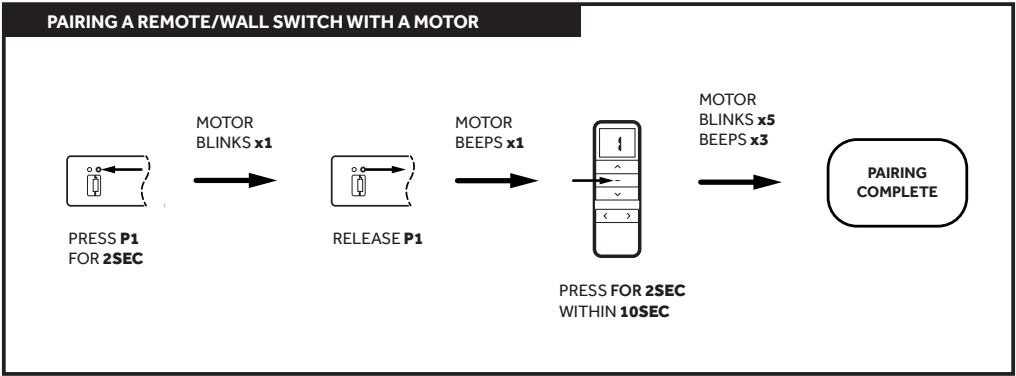

SWITCHING DIRECTION | METHOD 1

 

PRESS TOGETHER
FOR **2SEC**

MOTOR
BLINKS **x5**
BEEPS **x3**



**DIRECTION
SWITCHED**

NOTE:

Switching direction with a remote device is only possible before setting the top and bottom limits. To switch direction after the limits have been set use **METHOD 2**.

SWITCHING DIRECTION | METHOD 2



PRESS **P1**
FOR **10SEC**

MOTOR
BLINKS **x3**



RELEASE **P1**

MOTOR
BEEPS **x3**



 
PRESS FOR **2SEC**
WITHIN **10SEC**

MOTOR
BLINKS **x5**
BEEPS **x3**



**DIRECTION
SWITCHED**

SETTING LIMITS



PRESS
FOR **1SEC**



OPEN CURTAIN TO
DESIRED POSITION



PRESS
FOR **1SEC**



CLOSE CURTAIN TO
DESIRED POSITION

MOTOR
BLINKS **x5**
BEEPS **x3**



**LIMITS
SET**

 
CLEARING LIMITS



PRESS **P2**
FOR **1SEC**



MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS
FOR **1SEC**



MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS **P2**
FOR **1SEC**




MOTOR
BLINKS **x5**
BEEPS **x3**

**LIMITS
CLEARED**

ADVANCED SETTINGS


SETTING A FAVOURITE STOP POSITION

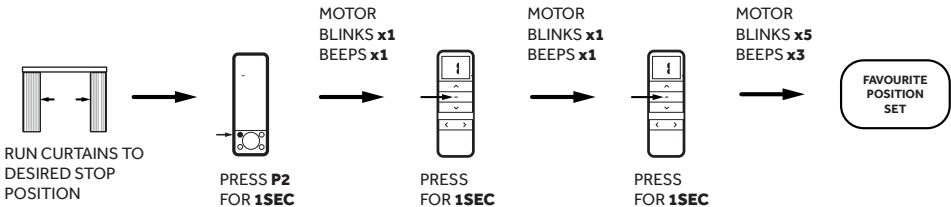


NOTE:

Pressing the stop button on remote control device for **2SEC** will automatically run the curtains to a favourite stop position.


CLEARING A FAVOURITE STOP POSITION

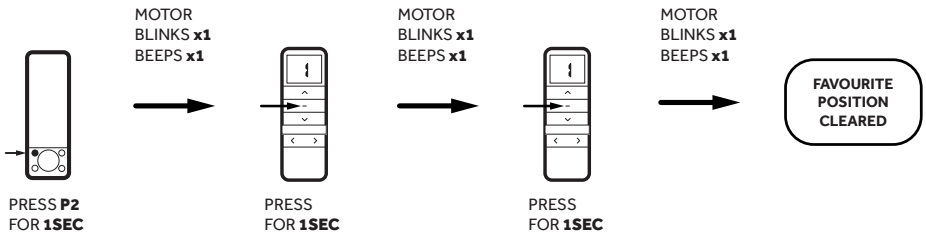

FINE-TUNING AN OPEN LIMIT

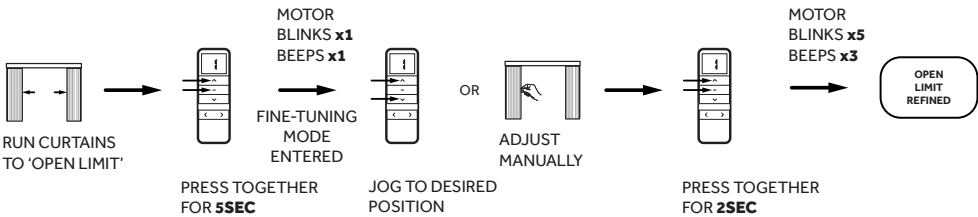

FINE-TUNING A CLOSED LIMIT

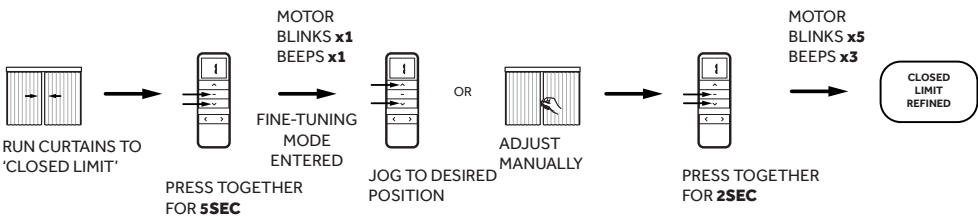


INCREASING MOTOR SPEED



PRESS **P2**
FOR **1SEC**

 MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS
FOR **1SEC**

MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS
FOR **1SEC**

MOTOR
BLINKS **x5**
BEEPS **x3**

**SPEED
INCREASED**

NOTE:

Three motor speed levels available.

If the motor does not respond to these instructions, it has already reached its maximum speed setting.

DECREASING MOTOR SPEED



PRESS **P2**
FOR **1SEC**

MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS
FOR **1SEC**

MOTOR
BLINKS **x1**
BEEPS **x1**



PRESS
FOR **1SEC**

MOTOR
BLINKS **x5**
BEEPS **x3**

**SPEED
DECREASED**

NOTE:

Three motor speed levels available.

If the motor does not respond to these instructions, it has already reached its minimum speed setting.

ACTIVATING / DEACTIVATING 'PULL TO START' CONTROL



PRESS **P1**
FOR **10SEC**

MOTOR
BLINKS **x3**



RELEASE **P1**

MOTOR
BEEPS **x1**



PRESS FOR **1SEC**
WITHIN **10SEC**

MOTOR
BLINKS **x5**
BEEPS **x3**

**PULL TO
START
ACTIVATED/
DEACTIVATED**

NOTE:

DEFAULT SETTING: **Pull to start activated**

DREAM 15 CHANNEL REMOTE


ADDITIONAL FUNCTIONALITY

HIDE / UNHIDE CHANNEL FUNCTION

Enables the user to hide or unhide unused or used channels. By selecting a specific channel, such as channel 5, channels 1 through 5 will remain active, while the other 10 unused channels will become hidden.

NOTE:


DEFAULT SETTING: **All 15 channels active.**

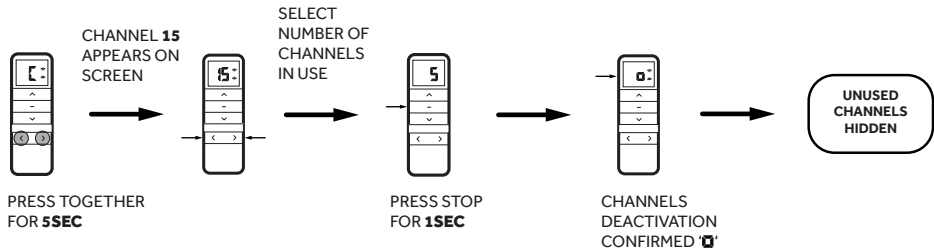

UNI-DIRECTION / BI-DIRECTION SWITCHING MODE

NOTE:

DEFAULT SETTING: **Bi-direction**

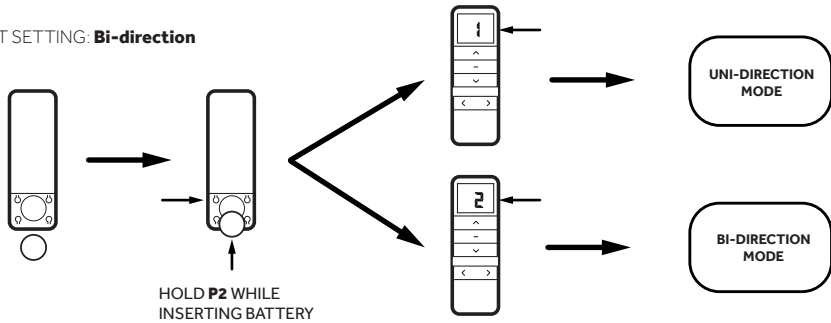


LOCKING / UNLOCKING REMOTE

Enables or disables entering the remote setting mode without affecting normal blind operation.

NOTE:

DEFAULT SETTING: **Remote unlocked**

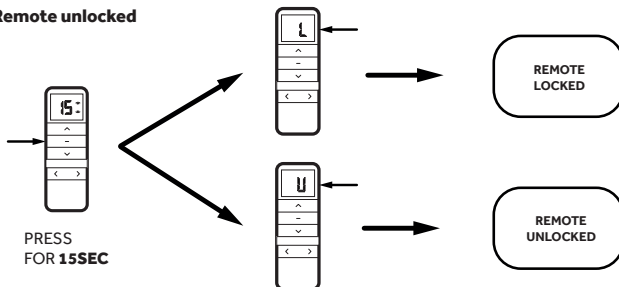

DREAM 15 CHANNEL WALL SWITCH


ADDITIONAL FUNCTIONALITY

HIDE / UNHIDE CHANNEL FUNCTION

Enables the user to hide or unhide unused or used channels. By selecting a specific channel, such as channel 5, channels 1 through 5 will remain active, while the other 10 unused channels will become hidden.

NOTE:


DEFAULT SETTING: **All 15 channels active.**

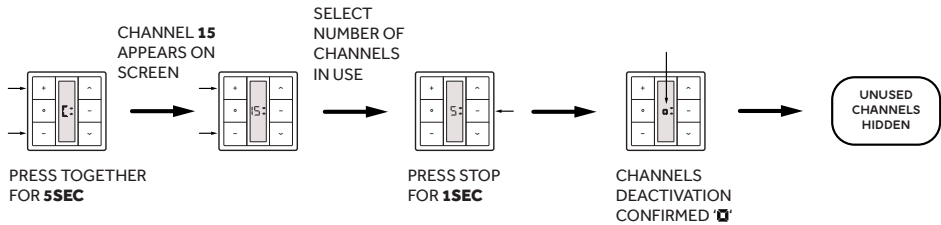

UNI-DIRECTION / BI-DIRECTION SWITCHING MODE

NOTE:

DEFAULT SETTING: **Bi-direction**

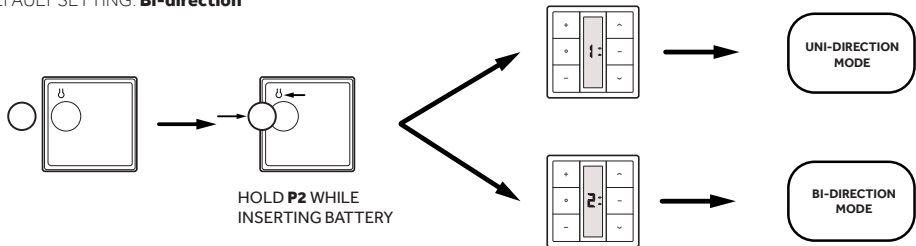


LOCKING / UNLOCKING WALL SWITCH

Enables or disables entering the wall switch setting mode without affecting normal blind operation.

NOTE:

DEFAULT SETTING: **Wall switch unlocked**

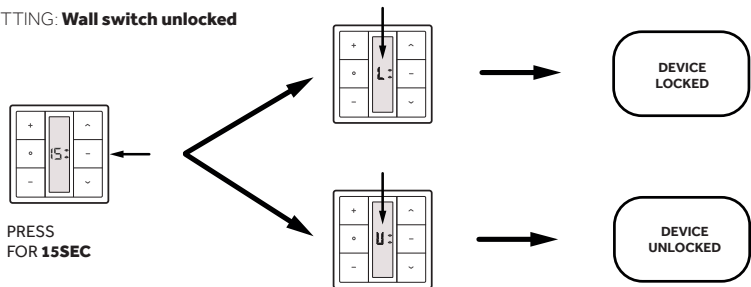

DREAMHUB PRO/DREAMHUB MINI

SETTING UP CONNECTR APP AND DREAMHUB



Connector is a free app, developed by our partner Shade Connector, and is available for iOS and Android.

- 1. Download the Connector app to pair and operate your DreamHub and devices
- 2. If using the Connector app for the first time, create an account and sign in
- 3. Once signed in, follow the in-app wizard for setup and operation instructions

CONNECTOR APP DOWNLOAD



iOS



Android



CONNECTOR APP / DREAMHUB SETUP


Visit our YouTube channel for the video step-by-step guide

DREAM SIGNAL BOOSTER


INSTALLATION

OPEN RANGE: **up to 200m**

'THROUGH TWO WALLS' RANGE: **up to 35mm**

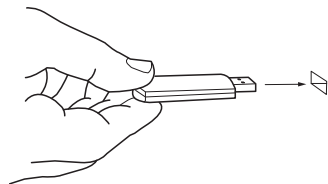


CONTINUOUS LIGHT
BOOSTER READY TO RECEIVE
AND TRANSMITS SIGNAL

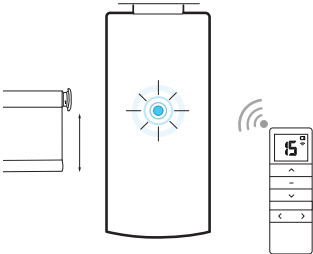


SINGLE BLEEP
BOOSTER RECEIVES
AND TRANSMITS SIGNAL

DREAM SUN SENSOR


INTERFACE AND BUTTONS SPECIFICATION

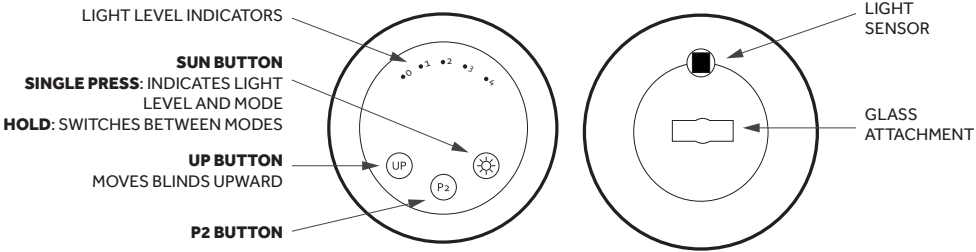

PAIRING A SENSOR WITH A SINGLE BLIND

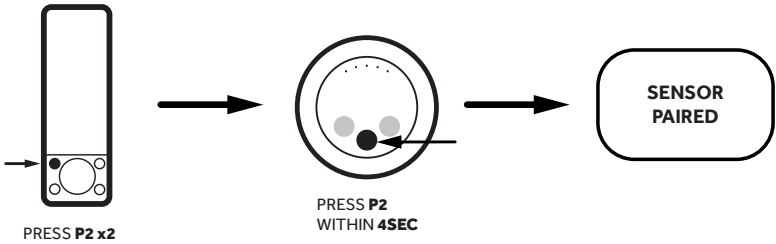


PAIRING A SENSOR WITH MULTIPLE BLINDS

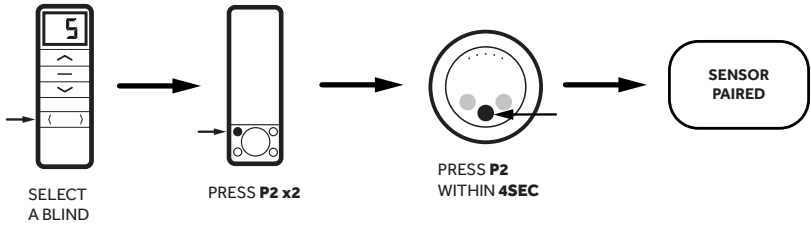

MODES INDICATION

The amount of beeps indicates the mode.

- MODE 1
- MODE 2
- MODE 3

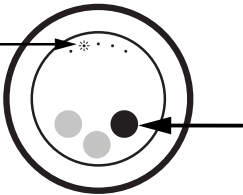

Press the **sun** button **x1**; the sensor indicates the light level and mode by emitting a beep and illuminating an indicator light.

SWITCHING BETWEEN SENSOR MODES

MODE 1


When the sun is continuously out for 2 minutes, the sensor will close the blind. You will need to use a remote control to open the blind again. After opening the blind, the process of closing will repeat as normal.

MODE 2


When the sun is continuously out for 2 minutes, the sensor will close the blind. If the light level falls below the threshold of 15 kilolux (Light Level 1) for a continuous 15 minutes, the sensor will open the blind. Even a short burst of light over 15 kilolux after the blind has been shut will reset the sensor's timer, and the 15-minute countdown will start again.

MODE 3

When the sun is continuously out for 2 minutes, the sensor will close the blind. If the light level falls below the threshold of 15 kilolux (Light Level 1) within 15 minutes, the sensor will open the blind instantaneously. If the light level falls below the threshold after 15 minutes, the sensor will open the blind after the next 15-minute interval.

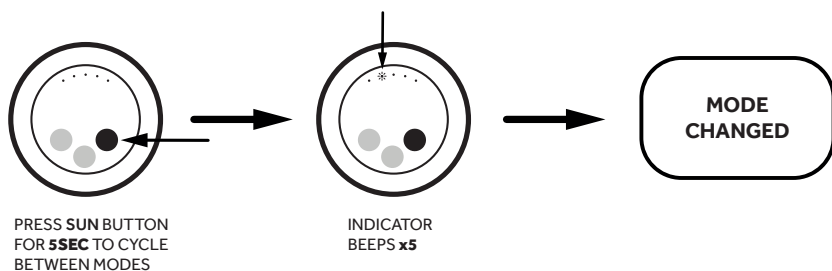

SWITCHING LIGHT LEVELS

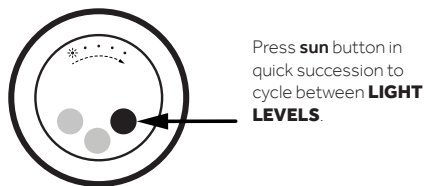


LOW BATTERY WARNING



TESTING APPLIED SETTINGS

NOTE

In case of insufficient light conditions to trigger the Sun Sensor (e.g., on a cloudy day), test the applied settings by shining a torch directly at the light sensor on the back of the Sun Sensor for at least **2 minutes**.

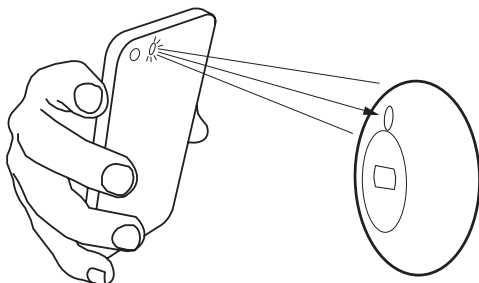

CONFORMITY DECLARATION

Decorquip Ltd. hereby declares that Dream products are in conformity with the essential requirements of the applicable European Directives and, in particular, the Electromagnetic Compatibility Directive 2014/30/EU, Machinery Directive 2006/42/EC, and Radio Directive 2014/53/EU.

DISPOSAL INSTRUCTIONS

Damaged or unused electrical products and batteries should not be disposed of with regular household waste. Please dispose of these items in compliance with local waste regulations. Alternatively, you can return your products to Decorquip Ltd.