


INTU Micro Pleated Survey Instructions

MEASUREMENTS


Note: Measure the glass size only.

1. Measure the visible glass width at 3 different points as shown.
Use the smallest measurement as the blind width.
2. Measure the drop
(ensure sizes are within specification as per table below)

Tensioned Bead Fit/ Guided Bead Fit			
Max Width	1000mmM	in Width	250mm
Max Drop	2400mmM	in Drop	250mm
Max Area	2m ² M	in Bead Depth	N/A

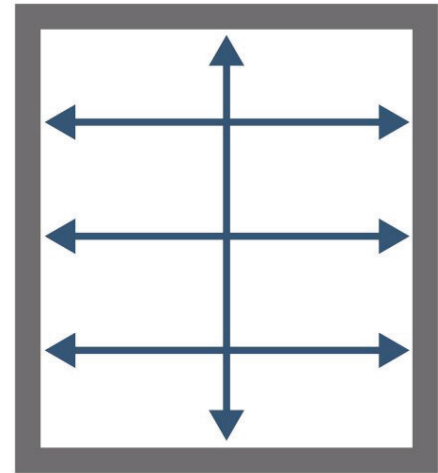

3. Check the frame & rubber seal type (see diagram).
Square Frame with flush rubber seal.
Yes or No?

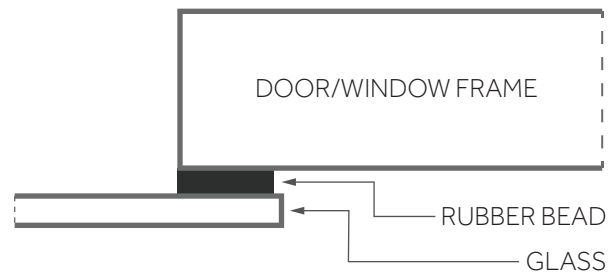

4. Using the survey kit, select side profile that best fits the frame.
Ensure that back face of side profile sits flat against the glass.

TYPE AXLT	YPE CXLT	YPE DXL	GUIDED

