

Motorised Curtain Track

Fitting, operation and maintenance instructions

Warning! The operating instructions must be read before operating the blind.


Fitting Instructions for Motorised Curtain Tracks | Top-fix installation

Ceiling Swivel Bracket

This procedure can be completed by non-professionals.


Step 1 - Position the brackets

Ensure that each supplied bracket is positioned at least 50 mm from each end of the track, with any remaining brackets spaced no more than 500 mm apart. Check that all brackets are aligned evenly before securing them in place.

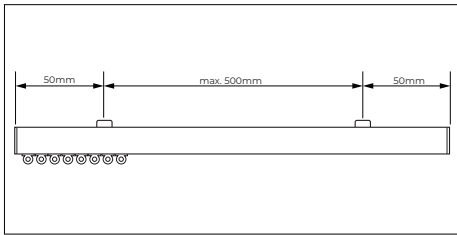



Step 2 - Mark, drill, and secure the brackets

If necessary, mark the screw positions by pencil through the bracket slots. Drill and plug the holes as required, then fix the brackets securely using appropriate fittings. (Please note that screws and fixings are not supplied).

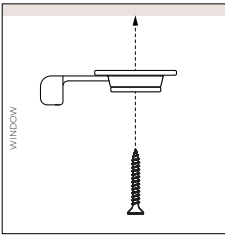

Step 3 - Install the track

Once the brackets are securely fixed, remove the track from its packaging, carefully clip it into the swivel brackets, then close the bracket lever to secure the track firmly in place.

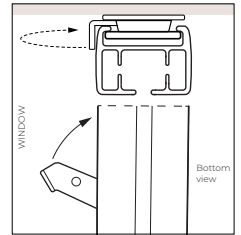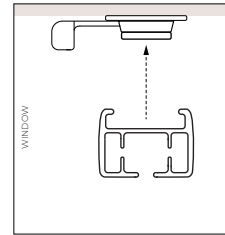


Fitting Instructions for Motorised Curtain Tracks | Face-fix installation

Ceiling Swivel Bracket + L Bracket

This procedure can be completed by non-professionals.


Step 1 - Bracket assembly

Attach the Ceiling Swivel Bracket to the L Bracket and secure it in place using the supplied screws.

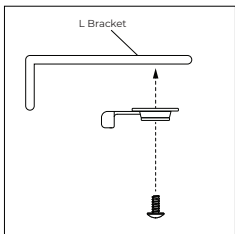


Step 2 - Bracket positioning

Ensure that each bracket is positioned at least 50 mm from each end of the track, with any remaining brackets spaced no more than 500 mm apart. Check that all brackets are aligned evenly before securing them in place.

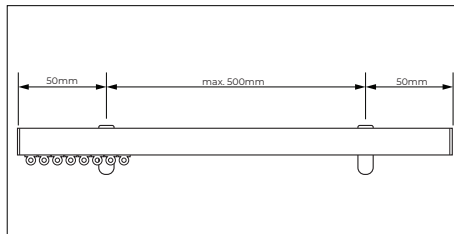

Step 3 - Mark, drill, and secure the brackets

If necessary, mark the screw positions by pencil through the bracket slots. Drill and plug the holes as required, then fix the brackets securely using appropriate fittings. (Please note that screws and fixings are not supplied).

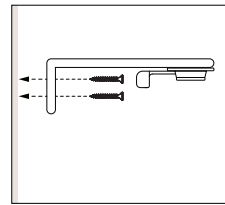

Step 4 - Install the track

Refer to Step 3 for top-fix installation.



Note: When using the L Bracket, motorised tracks and all ACT systems can be adapted for double-track installation. For more info visit www.decorquip.com

Joined Track Assembly

If your track is longer than 5 metres, it will be supplied in two sections along with a Track Connector. This procedure can be completed by non-professionals.



Step 1 - Join the track

To join sections, slide the provided Track Connector on top the first section of the track, then insert the second section into the connector. Push both sections together until they are fully aligned, and tighten the screws.

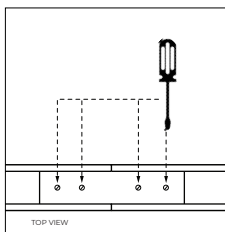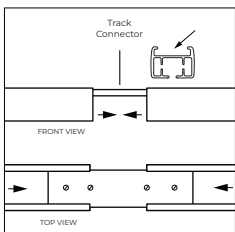



Step 2 - Assemble the master carrier

Turn the track over and locate the master carrier, which may be in two separate parts. Push both parts together, and secure them using the metal carrier joiner provided.

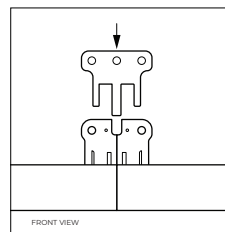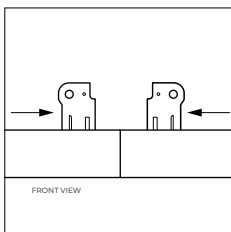

Step 3 - Attach the Roller and Overlap Arm

Position the roller and overlap arm onto the master carrier using the locating pins. Secure both components in place with the provided screws. Ensure the roller is positioned at the rear of the track and the overlap arm is at the front.

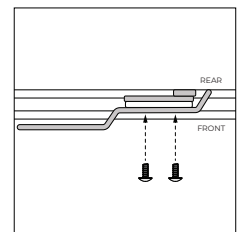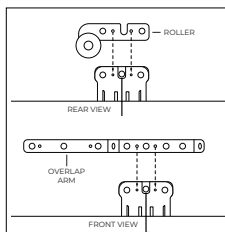

Operation & Maintenance

Warning! The operating instructions must be read before operating the blind.

Operating instructions

1. Ensure the track and curtain fabric is free of obstructions and that gliders move smoothly.
2. Your motorised curtain track features a convenient "pull to open/close" function. To operate manually, gently pull the curtain in the desired direction to start the opening or closing motion. Alternatively, use the provided control device to operate the curtain electronically.

For detailed information on operating modes, please refer to the Motorisation Instructions supplied with this blind before use.

Maintenance Instructions

This product is designed to be maintenance-free; however, we recommend carrying out regular visual inspections to ensure that no components are damaged, as this could lead to operating difficulties or pose a safety risk. If any maintenance is required, it should be completed promptly by a reputable blind company.

For smooth glider movement, a small amount of silicone-based lubricant may be applied.

Do not hang heavy items on the curtain track or pull forcefully. For safety and performance, do not make alterations to the track.